

5. Press **Security**.
6. Choose the same security protocol as your router. Options include **Open**, **wpa/wpa2** and **WPA2**. (WEP is not supported.)
7. If a password is required, press **Key**, and enter the password.
8. Press **Join**. A confirmation screen appears.
9. Press **OK** and **Save**.
10. Press ↵ to return to the previous screen.

Join a WPS Network

1. On the Controller, have the list of Wi-Fi options ready. Don't press any buttons yet.
2. Press the WPS button on the access point device or router.
3. On the list of Wi-Fi options, press **WPS**. The Controller displays "Please Stand by for WPS Operation".
4. If the operation is successful, the Controller displays "Device has been successfully added to the network".
5. Press **OK**.

If the operation is not successful, the Controller displays **Failed Operation. Device not added to the network**. Press **OK**.

Automatic/Manual Video Recovery

If video from remote cameras is lost or becomes distorted, the system can attempt to reset video streaming. By default, Lyric automatically begins to recover video about 60 seconds after Wi-Fi communication has been restored.

The default setting is automatic video recovery. You may set recovery to begin only by user intervention.

- On the list of Wi-Fi options, toggle between **Automatic Video Recovery** and **Manual Video Recovery**.
- Press ↵ to return to the Tools menu.

Software Updates

[Home](#) > [Security](#) > [Tools](#) > [Advanced](#)

Lyric Controller

Software updates for the Controller are published periodically. Some updates request user permission in an on-screen window. Press **Accept**, **Yes** or **OK** to install the update.

Certain critical updates are installed automatically. After updates of this type, information about the update is displayed on-screen.

You can see the current version of the Controller's software at [Security > Tools > Advanced > System Information](#).

IMPORTANT

After a new SiX™ series sensor or key fob is enrolled in your system, the new device's software should be updated. This ensures that you are using the most up-to-date version of the software.

Sensor Firmware

Normally, SiX™ Series sensors in your system are updated when the Controller's software is updated.

To initiate sensor firmware update manually:

1. On the **Advanced** menu, press **Update Sensor Firmware**.
2. Press **Start** and follow the instructions on the screen.
3. Press **Stop** when the update is complete.
4. Press ↵ to return to the **Advanced** menu.

Key Fob Firmware *(Wireless Keys)*

SiX™ Series wireless keys:

We recommend that you have the key fob handy so you can work with it as instructed during this procedure.

1. On the **Advanced** menu, press **Update Keyfob Firmware**.
2. Press **Start** and follow the instructions on the screen.
3. Press **Stop** when the update is complete.
4. Press ↵ to return to the **Advanced** menu.

Other types of wireless key:

Ask your installer about updating your system's other wireless keys.

Slide Show

[Home](#) > [Security](#) > [Tools](#) > [Slide Show](#)

The Controller can display your favorite photos when idle.

1. On the Tools screen, press ➤ and then **Slide Show**.
2. Connect a USB drive containing your photos (.jpg format only).
3. Press **Load Images**.
The Controller copies compatible files from all folders on the USB drive. When loading is complete, photos are displayed along with slide show options.
4. Remove the USB drive.
5. Select the desired options
 - **Slide Interval**: Time between slides.
 - **Slide After**: Idle time before slide show starts. Select **Disabled** for no slide show.
6. **Save** your settings.

- NOTES:**
- The slide show starts automatically when the Controller is idle.
 - To stop the slide show, touch the screen or the Home button.
 - Store up to 30 photos in the Controller.
 - To remove an image, select it on the Load menu and press **DELETE**.

Date / Time

[Home](#) > [Security](#) > [Tools](#) > [Date Time](#)

Lyric's clock and calendar are normally updated via the Controller's network connections.

If your Controller is operating with no network connections, use these controls to set date and time manually. Don't forget to specify your time zone and Daylight Savings Time if necessary. Be sure to **Save** your changes.

If Lyric is reconnected to the cellular phone network or the Internet, the clock and calendar are updated automatically.

Events

[Home](#) > [Security](#) > [Tools](#) > [Events](#)

The Controller keeps a log of system events such as:

- Arm/Disarm
- Alarm, Trouble and Fault
- Changes in status of Z-Wave devices

The system can save up to 6000 events. When the log is full, the oldest 2000 entries are deleted to make room for logging new events.

Logs can be viewed at the Controller or exported in a variety of file formats.

See [Event Log Codes](#) for a list of logged events and how they are displayed.