

## Security Solutions Inc.

## Napco Quick Start Instructions

To Arm System When Leaving: Press 4-digit Code & ON/OFF

**To Arm System While Staying On Premises** (Door on Delay) Press Interior & Press 4-digit code & ON/OFF

**To Arm System While Staying On Premises w/ No Entry Delay on Door(s)**: Press Instant & Press Interior & Press 4-digit Code ON/OFF

To Disarm System: Enter Code & Press ON/OFF

**Fire Alarm**: If a fire is detected, FIRE ALARM will be displayed on keypad and siren will sound, (*If* a fire is in progress evacuate immediately!) Go to each smoke Detector and check for a steady Red light, that is the one in alarm. <u>After detector in alarm is noted and/or smoke/alarm condition is corrected</u>, Press 4-Digit Code & ON/OFF & press Reset

To Reset: (Keypad Beeping): Press Reset Button

To View Zone Directory: Press Function until "Display Zone Directory" & Then Press Interior (Yes) To Scroll

To Bypass Zones: Press Bypass & Enter the Zone Number

To Un-Bypass Zones: Press Bypass & Enter the Zone Number **or** arm and disarm the system and bypass will be removed

Chime: Press Function until "Activate Chime" & Then Press Interior (Yes) a "C" will appear in the window

**Emergency Panic Police**: Press 9 & \* At the Same Time and Hold for 2 seconds

**Emergency Panic Fire**: Press 7 & \* At the Same Time and Hold for 2 seconds

For further instructions please refer to the Napco User Guide for your system





